



ASSEMBLING INSTRUCTIONS

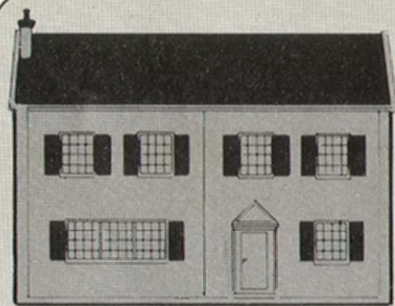


Manor

- ① Roof
- ② Chimney
- ③ Two chimney fixtures
- ④ Two roof pegs
- ⑤ Left gable
- ⑥ Right gable
- ⑦ Two gable locking pegs
- ⑧ Attic floor
- ⑨ First floor
- ⑩ Bottom floor
- ⑪ Bedroom wall
- ⑫ Hall wall
- ⑬ Big wall
- ⑭ Back board
- ⑮ 13 wooden pegs
- ⑯ Left front door
- ⑰ Right front door
- ⑱ 7 windows
- ⑲ 16 window shutters
- ⑳ 1 large window
- ㉑ 1 attic window
- ㉒ 16 window shutters
- ㉓ Outside doorframe with door
- ㉔ Inside doorcase

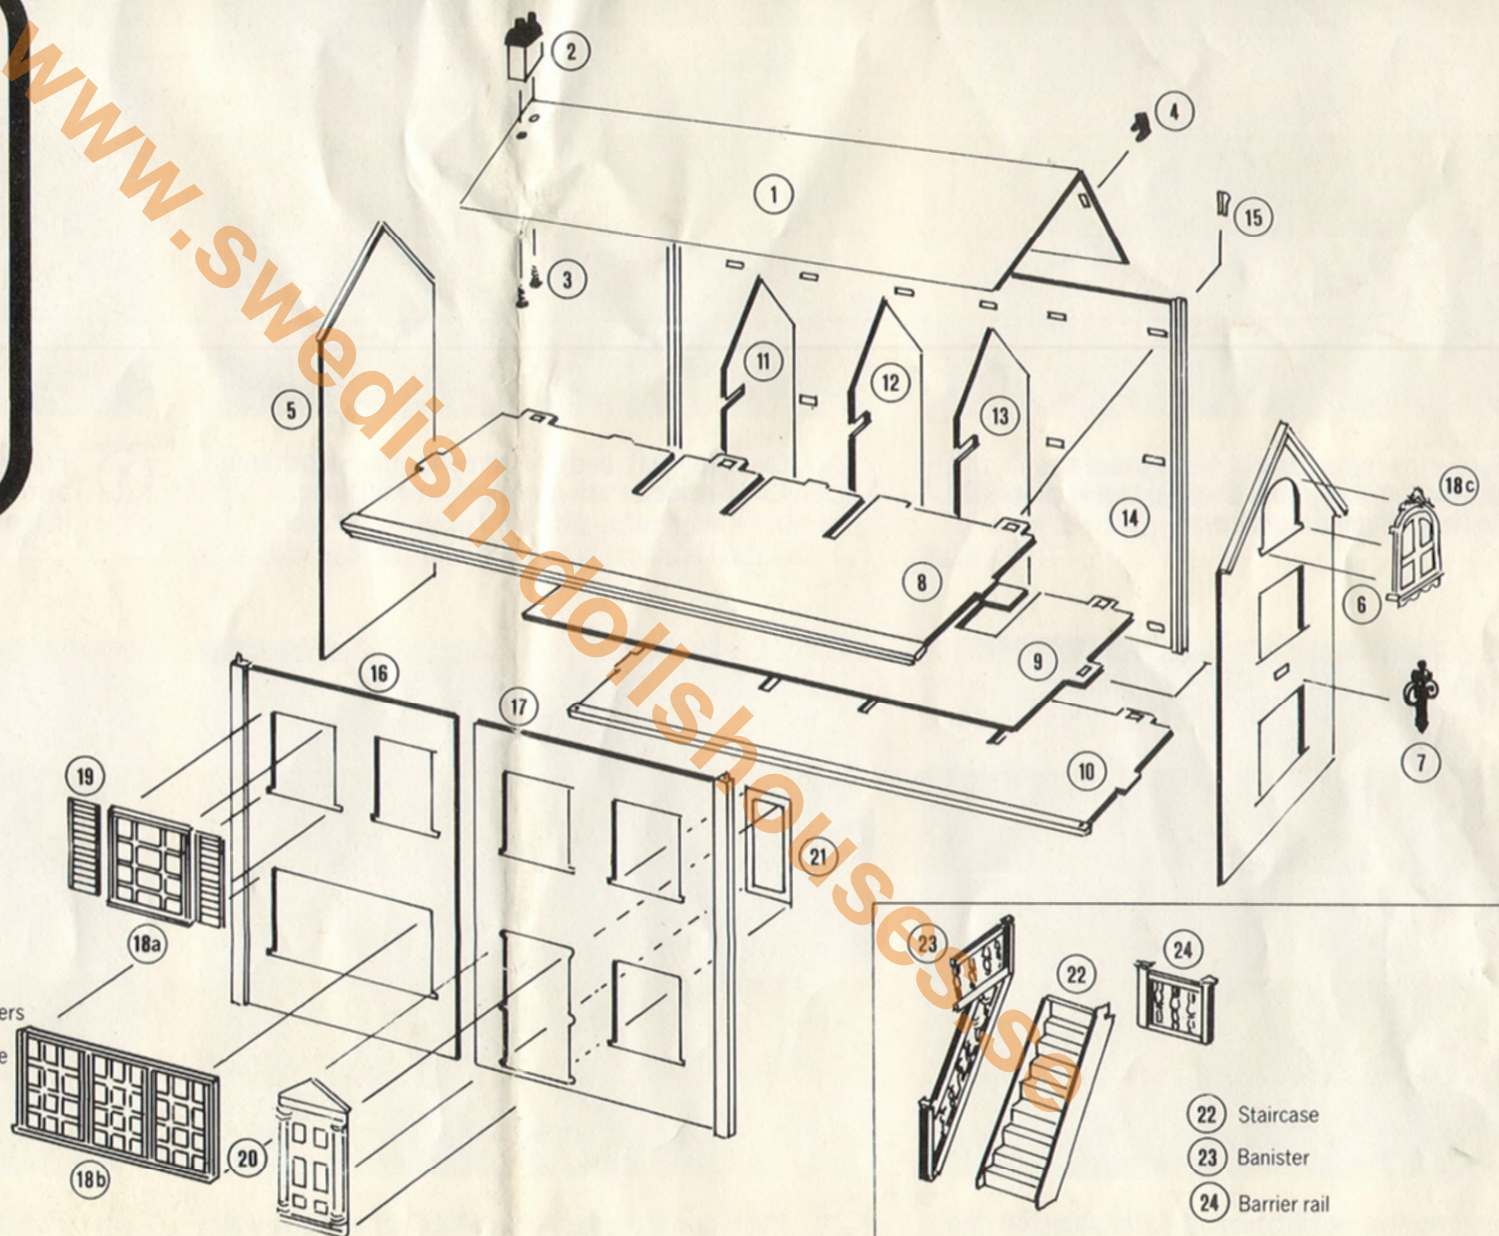


- ㉕ Staircase
- ㉖ Banister
- ㉗ Barrier rail

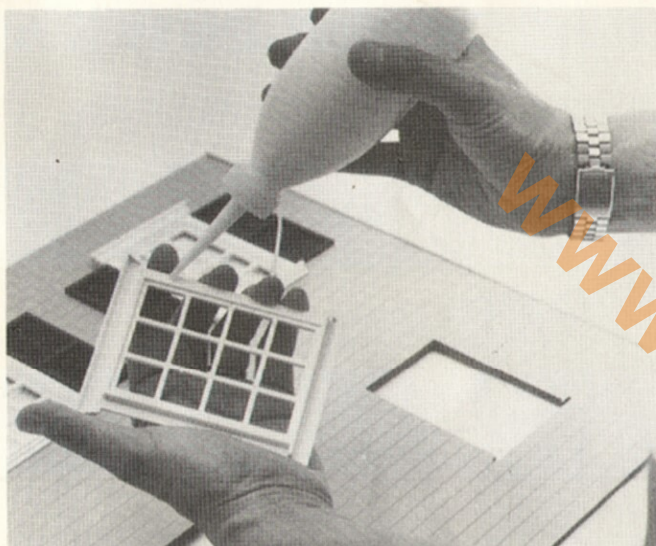


- ① Glue (polystyrene) the inside of the windowframe then put the window in place. Do like this with all the windows.




- ② Glue (polystyrene) all around the doorframe (20) (inside). Push the doorframe in place.

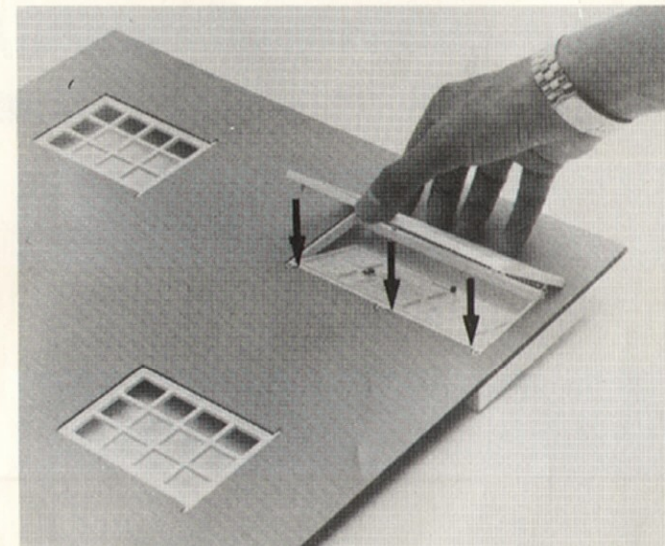


- ③ Put glue into the holes in the doorframe (see arrows). Insert the doorcase (21) with the taps in the holes of the doorframe.

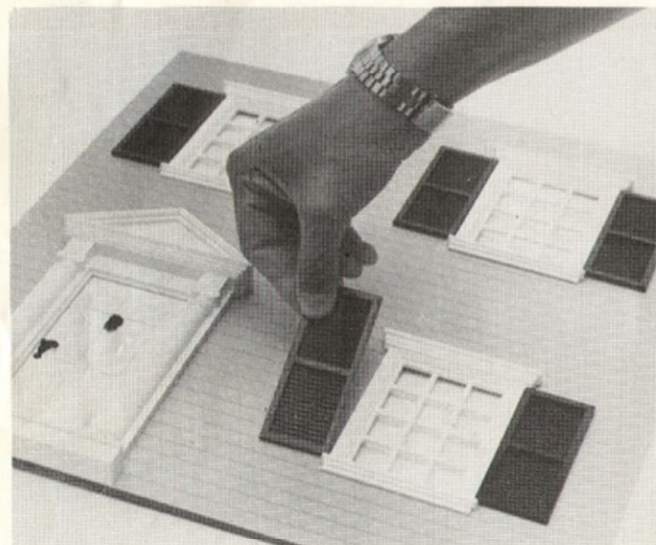


- ④ Remove the papercovering from tape on the window shutter's back and then fasten the shutters by the windows.

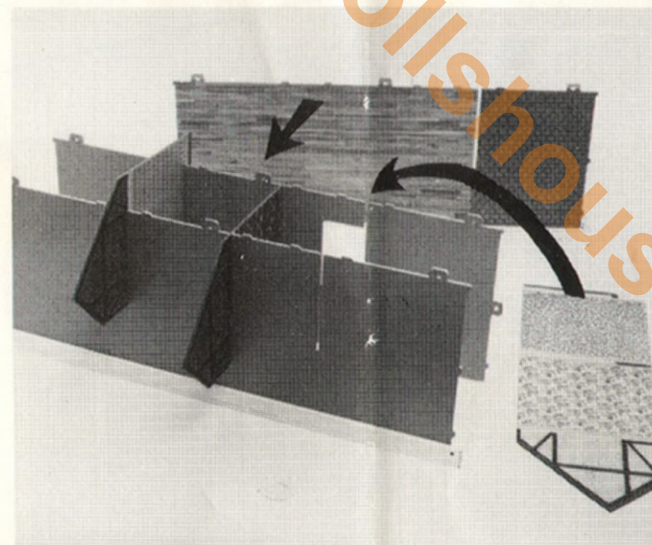

- ⑤ Push down the bedroom wall (11) and hall wall (12) into the attic floor (8) and second floor (9). The big wall (13) is to be pushed down into floor (8), (9) and bottom floor (10).

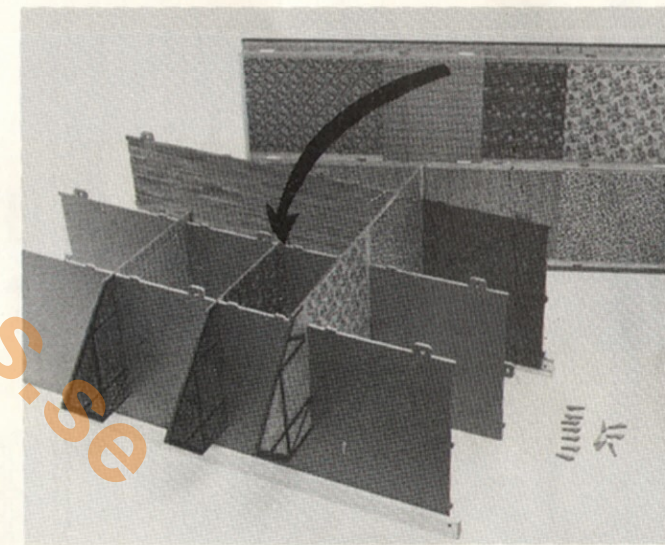


- ⑥ Put the back (14) in place.

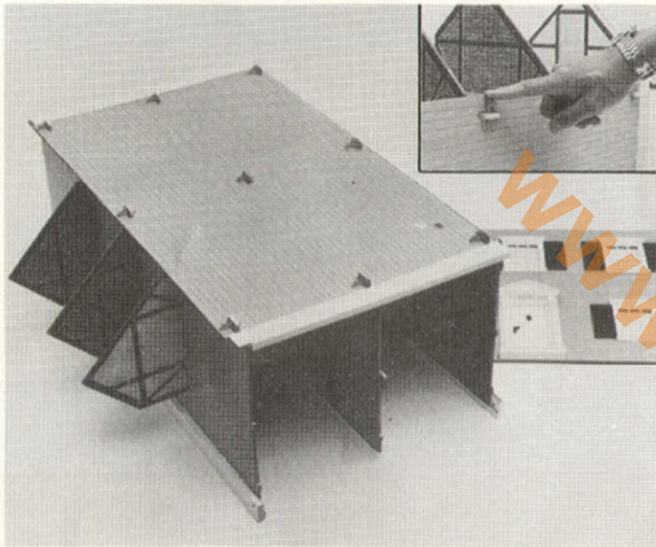


- 7 Fasten the back with 9 wooden pegs (15)




- 8 Assemble now the left and right fronts (16), (17). Place first the lower tap into the hole in bottom floor list. Lift the attic floor a little and fit in the upper tap into the hole in the attic floor list.

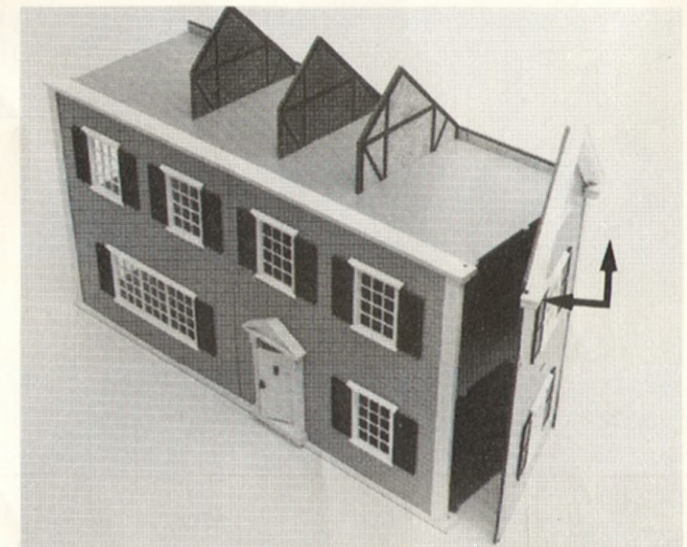


- 9 Press the gables (5) and (6) into the back list and fit it against floor edges so you can put the big tap in the first floor through the hole in the gable.

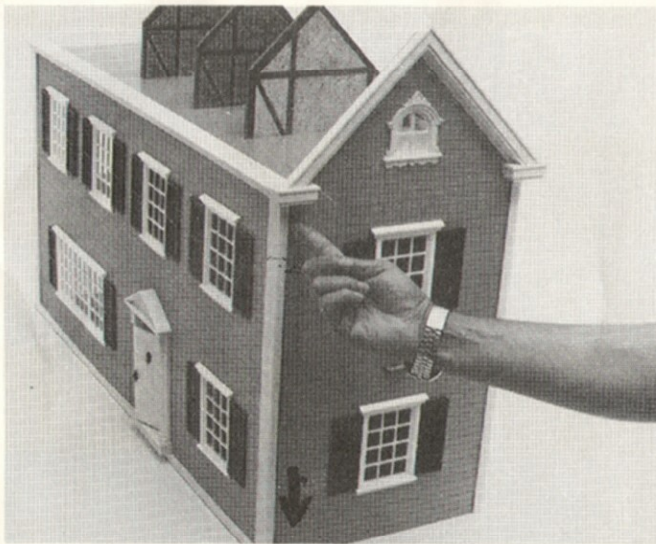


- 10 Press two wooden pegs for each gable into the holes in the attic floor and bottom floor.

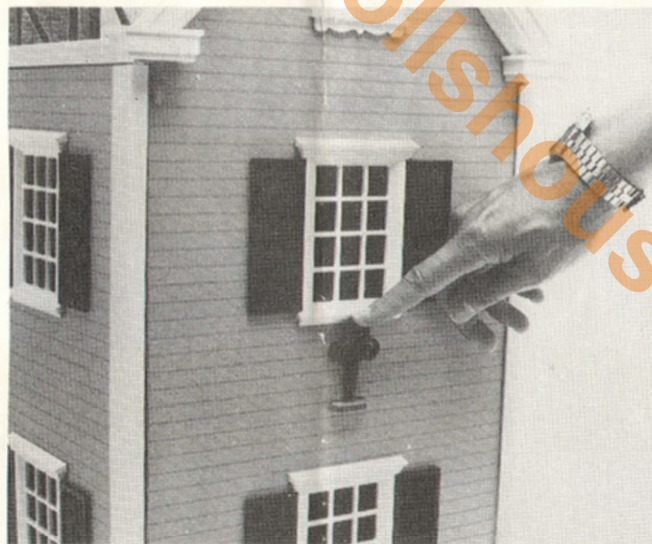


- 11 Fasten the gable locking pegs (7).

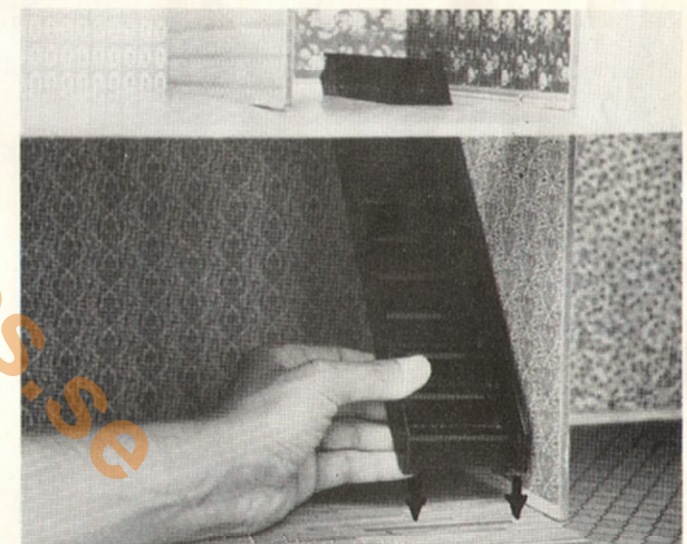


- 12 Place the staircase (22) with the taps in the bottom floor's holes

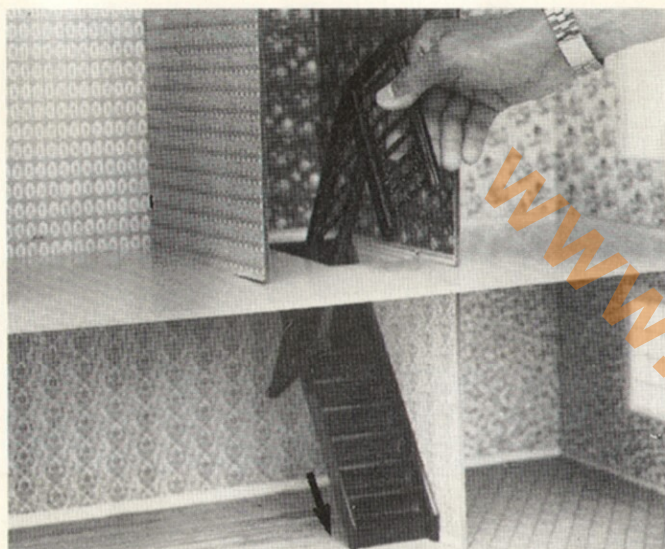


- 13 Place the banister (23) through the hole in the first floor. Put the tap in the lower end into the hole in the bottom floor.

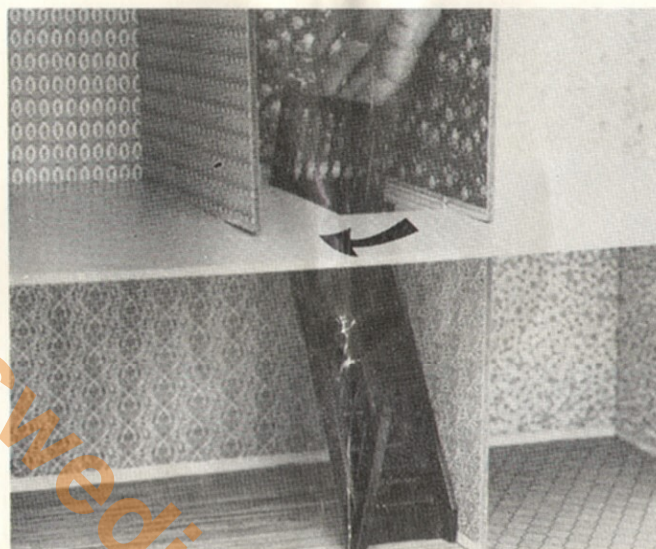

- 14 Straighten the banister against the edge.

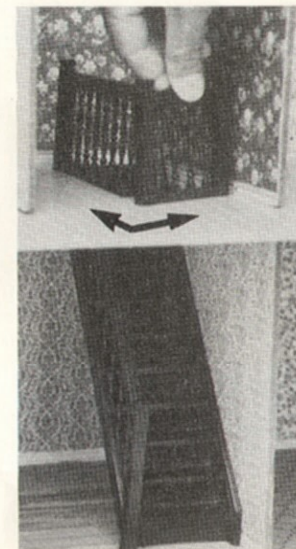


- 15 Place the barrier (24) with its taps in the holes on the big wall. Press then the barrier against the taps in the banister.

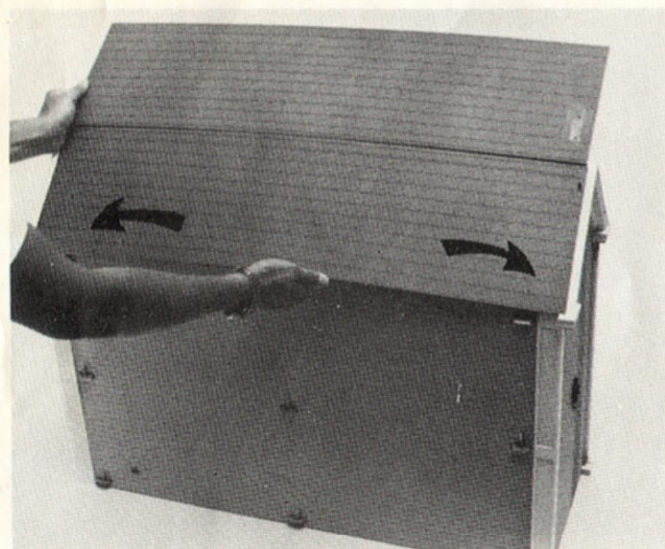

- 16 Start assembling the longer part of the roof against the back by first placing one end in the gable list and then bending the roof a little so the other end can be put into the list.



- 17 Press in the roof pegs (4)

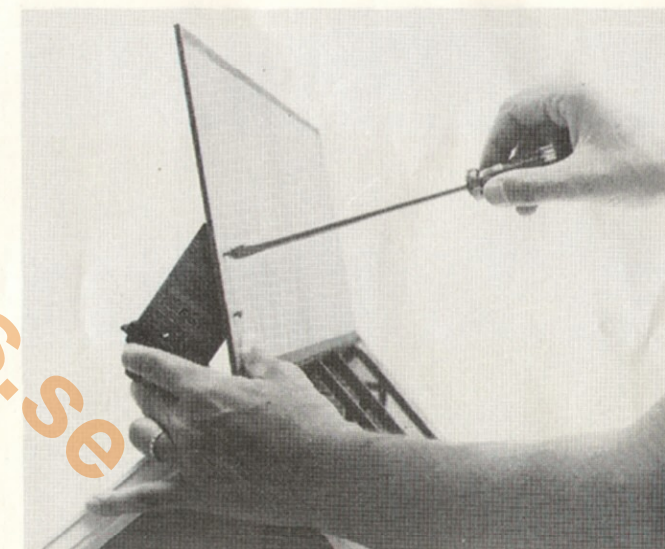

- 18 Fasten the chimney (2).